




Side Steps for AX3 Model

Part# E1-008

INSTALLATION INSTRUCTIONS

Included in this Kit

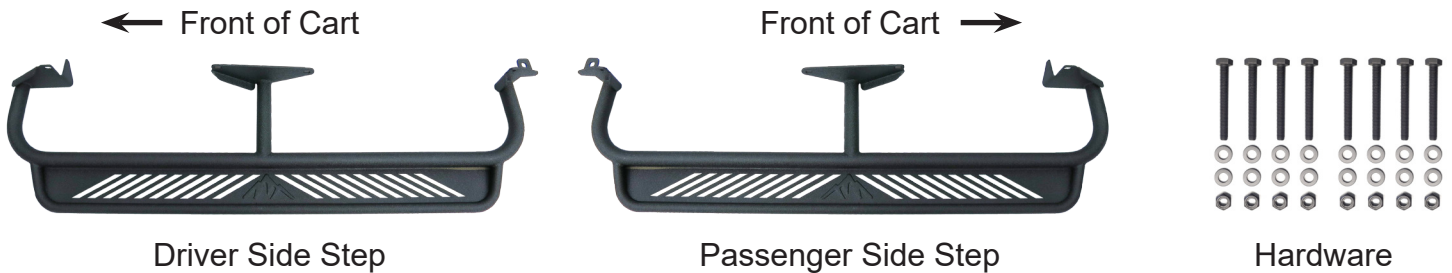


Driver Side Shown

STEP 1

Using a 13mm socket and a 15mm wrench remove the nuts and bolts highlighted.


Discard all hardware highlighted.

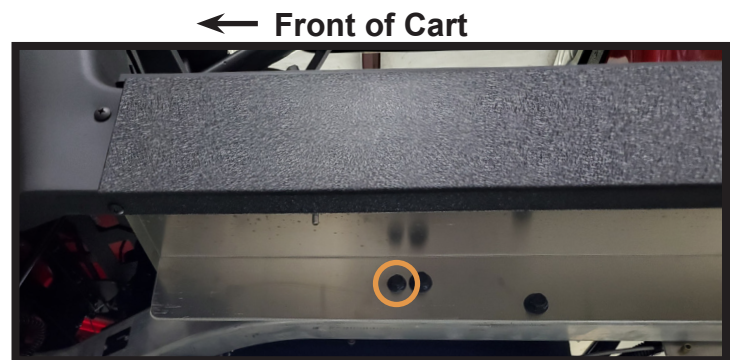


Center of Cart



Rear of Cart →

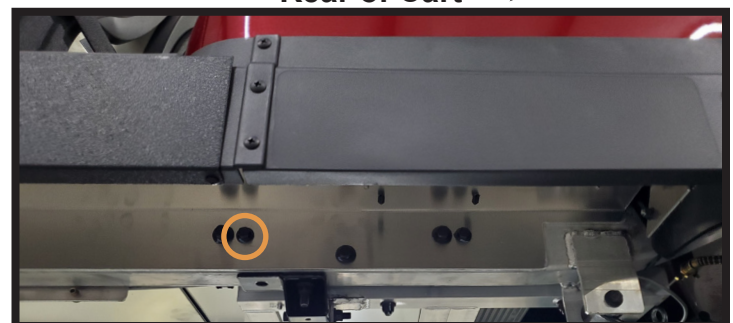

← Front of Cart

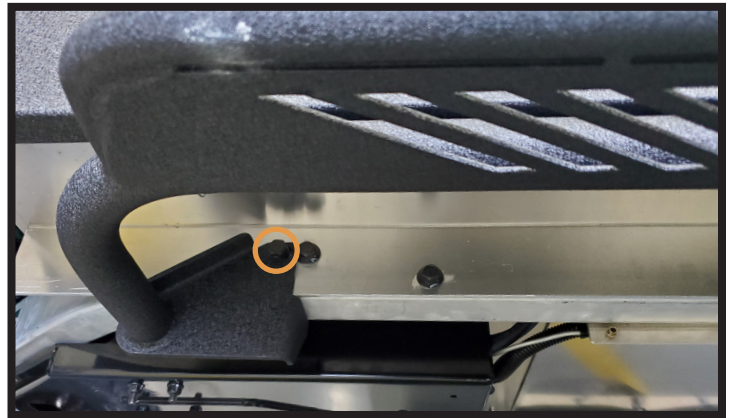

Driver Side Shown

STEP 2


Attach side step to frame using hardware supplied with the steps. Hand tighten until all bolts are in place.

Then use a 16mm socket and 17mm wrench to tighten hardware.

Repeat process on passenger side.



Center of Cart

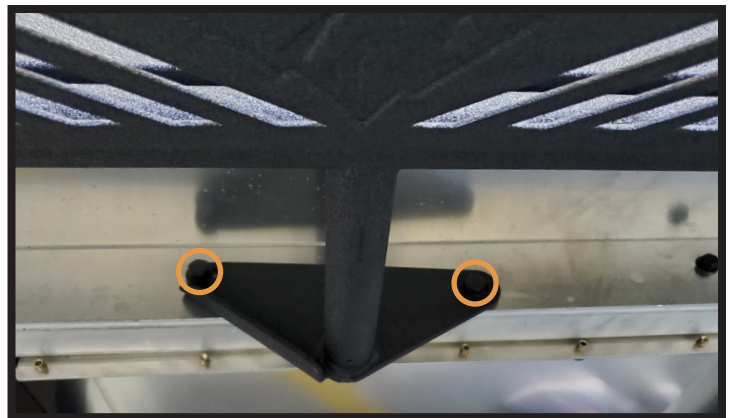

Rear of Cart →



INSTALLATION COMPLETE

For more instructions and videos visit sierralsv.com