



Side Steps for AX4 Model

Part# E1-009

INSTALLATION INSTRUCTIONS

Included in this Kit




STEP 1

Remove the 4 bolts circled using a 13mm socket, a 15mm wrench, and a 15mm socket.

Retain short factory bolts that thread into frame.


***Driver side shown.**

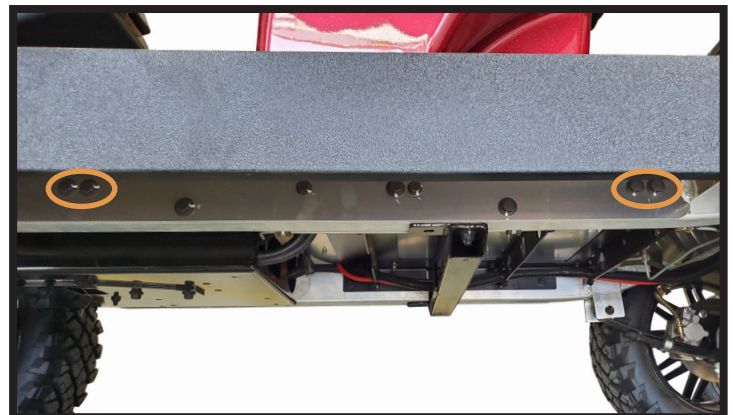

STEP 2

Attach the side steps to the frame using the factory bolts on the inside holes with a 15mm socket.

Attach the side steps to the frame using the supplied hardware on the outside holes with a 16mm socket and 17mm wrench. Repeat this process on the passenger side.

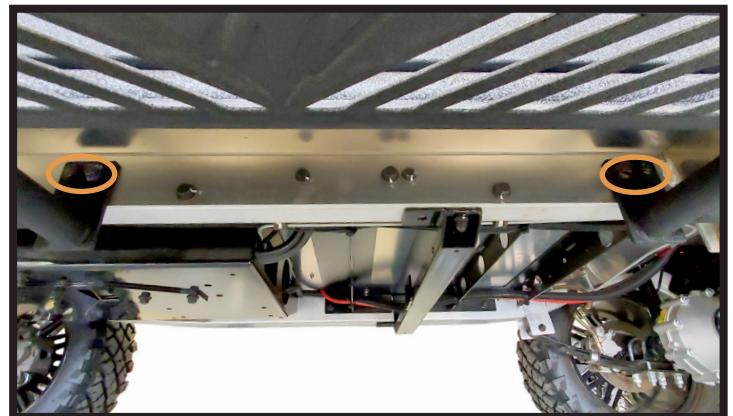

INSTALLATION COMPLETE



For more instructions and videos visit sierralsv.com