



# Side Steps for AX2 Model

Part# E1-007

## INSTALLATION INSTRUCTIONS

### Included in this Kit



Driver Side Step



Passenger Side Step





Hardware

Passenger Side Shown

## STEP 1

Using a 15mm socket, 13mm socket, and a 13mm wrench remove the nuts and bolts highlighted.


Retain nut from cross member and factory bolt as noted in picture.

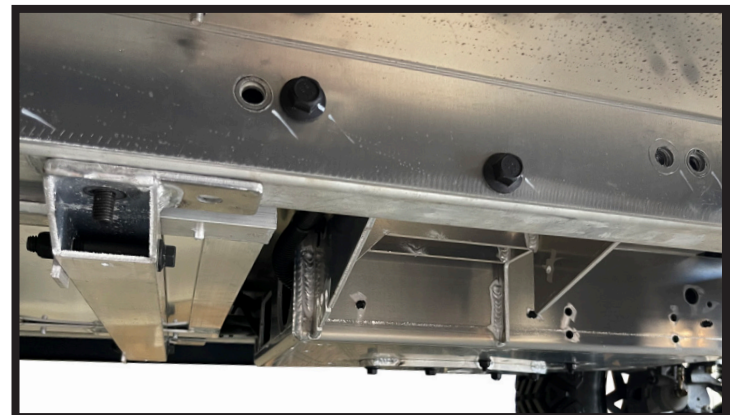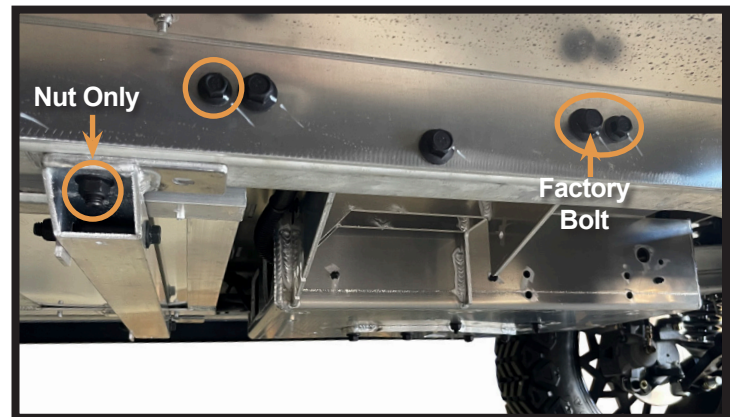

# STEP 2

Attach side step to frame using supplied hardware, factory nut and bolt. Then using a 15mm socket, 16mm socket, and 17mm wrench. Tighten hardware.

Repeat process on driver side.

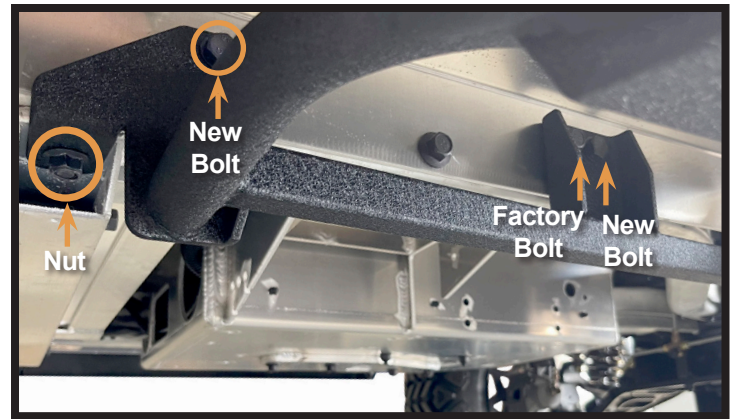

# INSTALLATION COMPLETE



For more instructions and videos visit [sierralsv.com](http://sierralsv.com)