



# Brush Guard for AX1 Model


Part# E1-001

## INSTALLATION INSTRUCTIONS

### Included in this Kit



Brush Guard

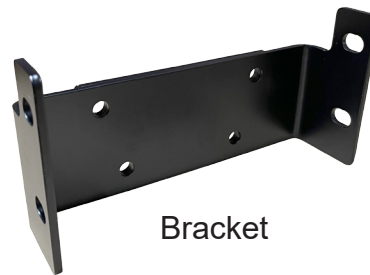

Bracket



Hardware


## STEP 1

Remove bumper with Phillips screwdriver and 10mm wrench.



## STEP 2

Remove old bumper brackets using a 10mm socket and 13mm wrench.

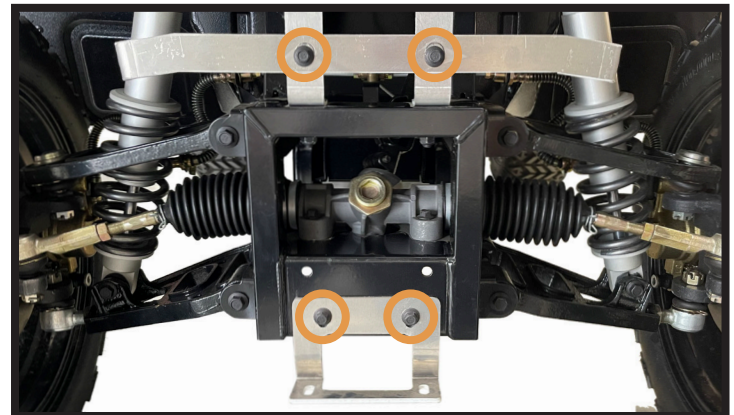

## STEP 3

Attach new mounting bracket to front frame using supplied hardware and a 14mm socket & 13mm wrench.



## STEP 4

Using the remaining hardware secure the brush guard to the mount using a 17mm wrench and socket. Once all four bolts are in place, then tighten.



# INSTALLATION COMPLETE



For more instructions and videos visit [sierralsv.com](http://sierralsv.com)