



WINDSHIELD WIPER PART# J1-008

INSTALLATION INSTRUCTIONS


Included in this Kit



Important: This windshield wiper should only be installed on Sierra AS4 Polycarbonate Windshields. Damage occurred when installing to any other material type will not be covered under warranty.


STEP 1

Remove protective blade sleeve.

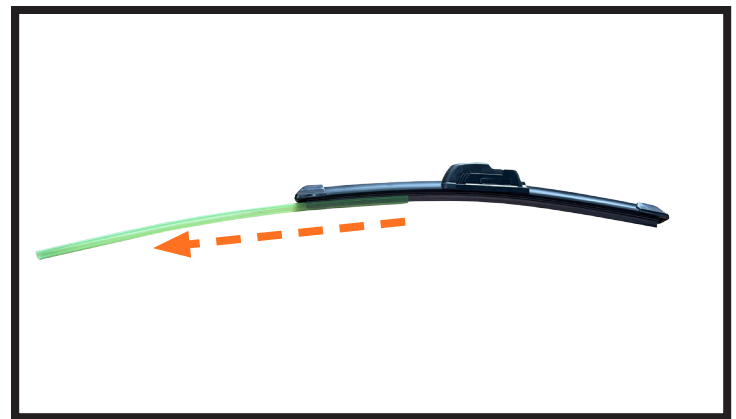


STEP 2

Squeeze the two sides of the wiper blade cover at the points shown to open blade arm cover.

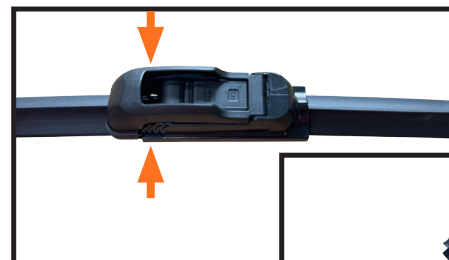

STEP 3


Insert blade arm into cover in the direction shown. Pull the hooked end of the blade arm into the wiper blade mount that sits inside the cover.

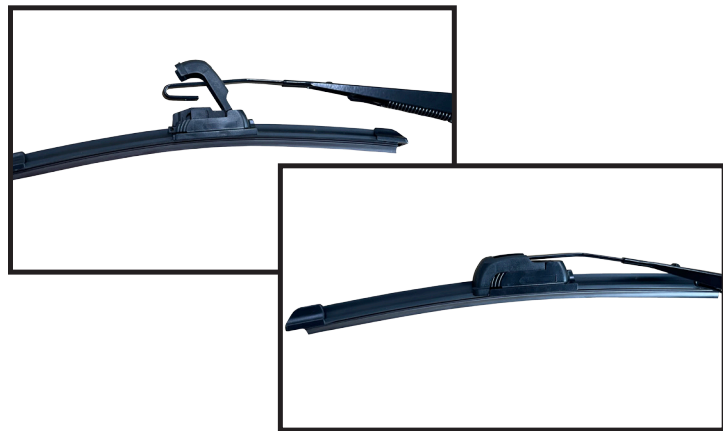

STEP 4

Mark your drill point for the Handle at the center of the windshield and 3" below the top curve of the windshield as shown. Using a 7/16" drill bit and safety glasses, drill the hole for the Handle.


Note: Sierra AS4 Polycarbonate windshields will not shatter, crack, or chip. It is not the same as a typical acrylic windshield.

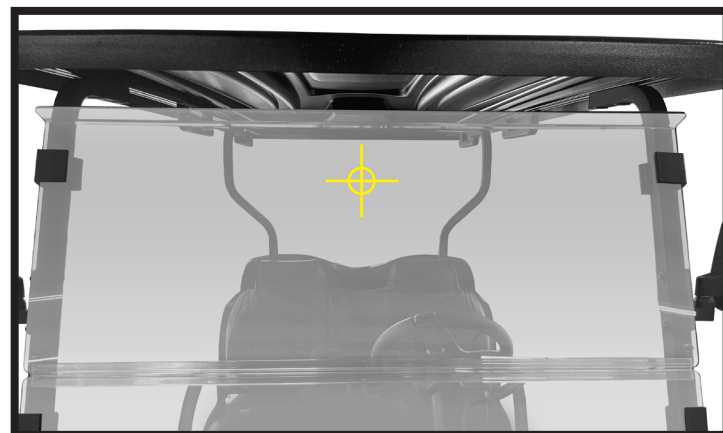

STEP 5

Remove the small nut, large nut, washer, and rubber gasket. Insert Handle from the inside of the windshield and reattach the gasket, washer, and larger nut.

Note: The Handle will not stay in place until the wiper arm is installed.

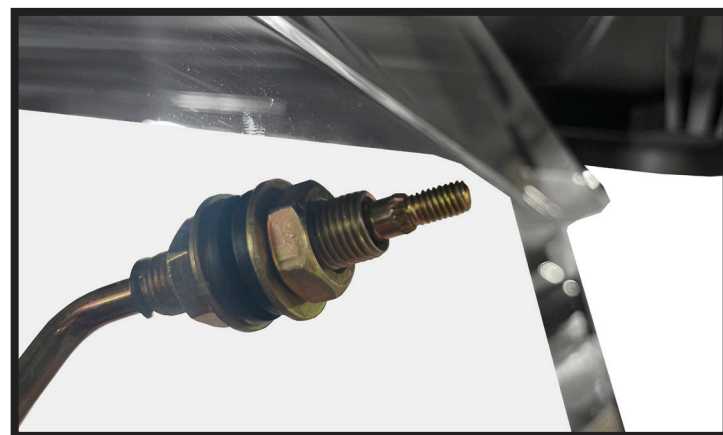

STEP 6

Pull the Wiper arm cover back and attach the arm mount to the end of the Handle using the small nut removed in the previous step.



STEP 7

Tighten the small nut with a 10mm wrench. Then tighten both large nuts on each side of the windshield using a 19mm wrench.

Note: Do NOT overtighten the large nuts.



INSTALLATION COMPLETE

For more instructions and videos visit sierralsv.com